

PIONEER LOCATIONS.xls

4 HINGES

Hinge Size	Hinge Qty.	Opening Height	1st Hinge	2nd Hinge	3rd Hinge	4th Hinge	Strike Location AFF
4.50	4	6'	5	22 1/2	40	57 1/2	38
4.50	4	6'2"	5	23 3/16	41 3/8	59 9/16	38
4.50	4	6'4"	5	23 13/16	42 5/8	61 7/16	38
4.50	4	6'6"	5	24 1/2	44	63 1/2	38
4.50	4	6'8"	5	25 3/16	45 3/8	65 9/16	38
4.50	4	6'10"	5	25 13/16	46 5/8	67 7/16	38
4.50	4	7'	5	26 1/2	48	69 1/2	38
4.50	4	7'2"	5	27 3/16	49 3/8	71 9/16	38
4.50	4	7'4"	5	27 13/16	50 5/8	73 7/16	38
4.50	4	7'6"	5	28 1/2	52	75 1/2	38
4.50	4	7'8"	5	29 3/16	53 3/8	77 9/16	38
4.50	4	7'10"	5	29 13/16	54 5/8	79 7/16	38
4.50	4	8'	5	30 1/2	56	81 1/2	38
4.50	4	8'2"	5	31 3/16	57 3/8	83 9/16	38
4.50	4	8'4"	5	31 13/16	58 5/8	85 7/16	38
4.50	4	8'6"	5	32 1/2	60	87 1/2	38
4.50	4	8'8"	5	33 3/16	61 3/8	89 9/16	38
4.50	4	8'10"	5	33 13/16	62 5/8	91 7/16	38
4.50	4	9'	5	34 1/2	64	93 1/2	38
4.50	4	9'2"	5	35 3/16	65 3/8	95 9/16	38
4.50	4	9'4"	5	35 13/16	66 5/8	97 7/16	38
4.50	4	9'6"	5	36 1/2	68	99 1/2	38
4.50	4	9'8"	5	37 3/16	69 3/8	101 9/16	38
4.50	4	9'10"	5	37 13/16	70 5/8	103 7/16	38
4.50	4	10'	5	38 1/2	72	105 1/2	38
5	4	6'	5	22 5/16	39 5/8	56 15/16	38
5	4	6'2"	5	23	41	59	38
5	4	6'4"	5	23 5/8	42 1/4	60 7/8	38
5	4	6'6"	5	24 5/16	43 5/8	62 15/16	38
5	4	6'8"	5	25	45	65.66.875	38
5	4	6'10"	5	25 5/8	46 1/4	68 15/16	38
5	4	7'	5	26 5/16	47 5/8	71	38
5	4	7'2"	5	27	49	72 7/8	38
5	4	7'4"	5	27 5/8	50 1/4	74 15/16	38
5	4	7'6"	5	28 5/16	51 5/8	77	38
5	4	7'8"	5	29	53	78 7/8	38

Note: (1) Locations and adjustments must be verified with each manufacturer.

PIONEER LOCATIONS.xls

4 HINGES

Hinge Size	Hinge Qty.	Opening Height	1st Hinge	2nd Hinge	3rd Hinge	4th Hinge	Strike Location AFF
5	4	7'10"	5	29 5/8	54 1/4	78 7/8	38
5	4	8'	5	30 5/16	55 5/8	80 15/16	38
5	4	8'2"	5	31	57	83	38
5	4	8'4"	5	31 5/8	58 1/4	84 7/8	38
5	4	8'6"	5	32 5/16	59 5/8	86 15/16	38
5	4	8'8"	5	33	61	89	38
5	4	8'10"	5	33 5/8	62 1/4	90 7/8	38
5	4	9'	5	34 5/16	63 5/8	92 15/16	38
5	4	9'2"	5	35	65	95	38
5	4	9'4"	5	35 5/8	66 1/4	96 7/8	38
5	4	9'6"	5	36 5/16	67 5/8	98 15/16	38
5	4	9'8"	5	37	69	101	38
5	4	9'10"	5	37 5/8	70 1/4	102 7/8	38
5	4	10'	5	38 5/16	71 5/8	104 15/16	38

Subtract clearance from hinge locations & undercut from strike locations for doors

Note: (1) Locations and adjustments must be verified with each manufacturer.

(2) HMF Express is not responsible for errors resulting from using this table.