

HMF EXPRESS

4 HINGES

Hinge Size	Hinge Qty.	Opening Height	1st Hinge	2nd Hinge	3rd Hinge	4th Hinge	Strike Location AFF
4.50	4	6'8"	5	25 1/8	45 1/4	65 3/8	40 5/16
4.50	4	6'10"	5	25 1/8	45 1/4	65 3/8	40 5/16
4.50	4	7'	5	26 1/2	48	69 1/2	40 5/16
4.50	4	7'2"	5	26 1/2	48	69 1/2	40 5/16
4.50	4	7'4"	5	27 7/8	50 3/4	73 5/8	40 5/16
4.50	4	7'6"	5	27 7/8	50 3/4	73 5/8	40 5/16
4.50	4	7'8"	5	29 1/8	53 1/4	77 3/8	40 5/16
4.50	4	7'10"	5	29 1/8	53 1/4	77 3/8	40 5/16
4.50	4	8'	5	30 1/2	56	81 1/2	40 5/16
4.50	4	8'2"	5	30 1/2	56	81 1/2	40 5/16
4.50	4	8'4"	5	31 7/8	58 3/4	85 5/8	40 5/16
4.50	4	8'6"	5	31 7/8	58 3/4	85 5/8	40 5/16
4.50	4	8'8"	5	33 1/8	61 1/4	89 3/8	40 5/16
4.50	4	8'10"	5	33 1/8	61 1/4	89 3/8	40 5/16
4.50	4	9'	5	34 1/2	64	93 1/2	40 5/16
4.50	4	9'2"	5	34 1/2	64	93 1/2	40 5/16
4.50	4	9'4"	5	35 7/8	66 3/4	97 5/8	40 5/16
4.50	4	9'6"	5	35 7/8	66 3/4	97 5/8	40 5/16
4.50	4	9'8"	5	37 1/8	69 1/4	101 3/8	40 5/16
4.50	4	9'10"	5	37 1/8	69 1/4	101 3/8	40 5/16
4.50	4	10'	5	38 1/2	72	105 1/2	40 5/16
5	4	6'8"	4 3/4	24 7/8	45	65 1/8	40 5/16
5	4	6'10"	4 3/4	24 7/8	45	65 1/8	40 5/16
5	4	7'	4 3/4	26 1/4	47 3/4	69 1/4	40 5/16
5	4	7'2"	4 3/4	26 1/4	47 3/4	69 1/4	40 5/16
5	4	7'4"	4 3/4	27 5/8	50 1/2	73 3/8	40 5/16
5	4	7'6"	4 3/4	27 5/8	50 1/2	73 3/8	40 5/16
5	4	7'8"	4 3/4	28 7/8	53	77 1/8	40 5/16
5	4	7'10"	4 3/4	28 7/8	53	77 1/8	40 5/16
5	4	8'	4 3/4	30 1/4	55 3/4	81 1/4	40 5/16
5	4	8'2"	4 3/4	30 1/4	55 3/4	81 1/4	40 5/16
5	4	8'4"	4 3/4	31 5/8	58 1/2	85 3/8	40 5/16
5	4	8'6"	4 3/4	31 5/8	58 1/2	85 3/8	40 5/16
5	4	8'8"	4 3/4	32 7/8	61	89 1/8	40 5/16
5	4	8'10"	4 3/4	32 7/8	61	89 1/8	40 5/16
5	4	9'	4 3/4	34 1/4	63 3/4	93 1/4	40 5/16

Note: (1) Locations and adjustments must be verified with each manufacturer.

HMF EXPRESS

4 HINGES

Hinge Size	Hinge Qty.	Opening Height	1st Hinge	2nd Hinge	3rd Hinge	4th Hinge	Strike Location AFF
5	4	9'2"	4 3/4	34 1/4	63 3/4	93 1/4	40 5/16
5	4	9'4"	4 3/4	35 5/8	66 1/2	97 3/8	40 5/16
5	4	9'6"	4 3/4	35 5/8	66 1/2	97 3/8	40 5/16
5	4	9'8"	4 3/4	36 7/8	69	101 1/8	40 5/16
5	4	9'10	4 3/4	36 7/8	69	101 1/8	40 5/16
5	4	10'	4 3/4	38 1/4	71 3/4	105 1/4	40 5/16

Subtract clearance from hinge locations & undercut from strike locations for doors

Note: (1) Locations and adjustments must be verified with each manufacturer.

(2) HMF Express is not responsible for errors resulting from using this table.