


## STC 46 Value 3-Sided Single Frame (Cased Open)

FRAME PART	DIMENSIONS
THROAT	
MINIMUM	2 3/4"
MAXIMUM	13"
A=Jamb Depth	
MINIMUM	3 3/4"
MAXIMUM	14"
D=FACES	
MINIMUM	1 1/4"
MAXIMUM	4"
E=RETURNS	
MINIMUM	7/16"
MAXIMUM	3/4"
HEIGHT	
MINIMUM	80"
MAXIMUM	96"
WIDTH - SGL.	
MINIMUM	24"
MAXIMUM	48"
All Hardware Preps receive Mortar Guards	
All Frames 14 Ga (CRS & A60 Available)	
Butt or Continuous Hinges	
High Frequency Hinge Rein. Required	
ASA Strike Only	
Frames Tested without Closer reinf.	

Available Continuously Welded Only

Rough Opening = Overall Frame Size + Clearance

Non Fire Rated Only

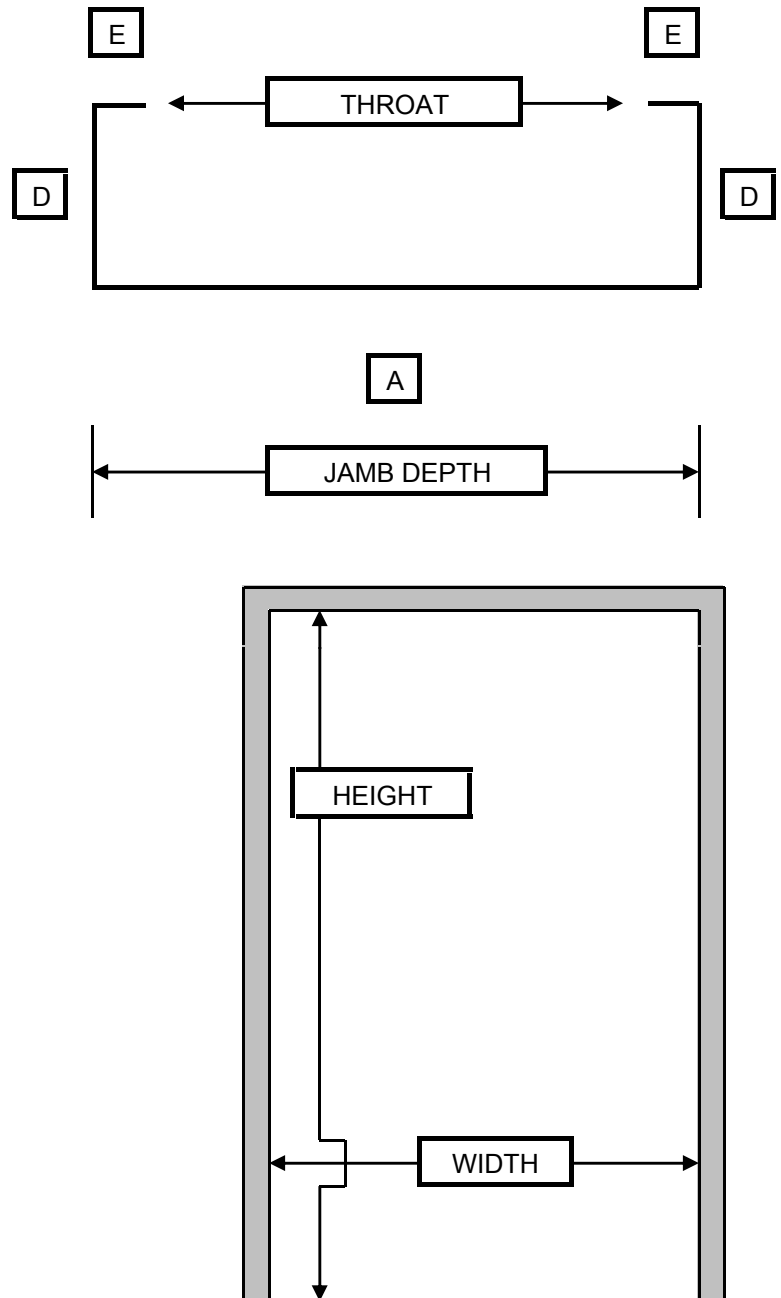

### ANCHOR OPTIONS

Masonry & Stud Type (Grout-Filled Only)

All Frames Must be Grouted Solid



(Toll Free) Phone 866-452-1845 Fax 910-452-1848

## STC 46 Single - Sound Rated Value Door

Proprietary Core

Threshold and All Seals Provided

14 Ga. Continuous (Full Height)  
Hinge & Lock Channel Rein.

14 Ga. Top & Bottom Channels  
with 16 gauge flush caps

16 Gauge Face Sheets

Minimum Size 2-0 x 6-8

Maximum Size 4-0 x 8-0

Continuous or Butt Hinges  
Approved (Furnished by Others)

161 Lock Approved  
(Furnished By Others)

 
Thickness 1 3/4"

Beveled or Square Edge Construction

Welded Seamless Construction

Baked On Grey Primer

Hardware Rein: Hinge = 7 Ga.  
161 Lock = 16 Ga





## STC 46 Value Opening

### 1-3/4" Thick Flush Single Door and Frame Package

(Available 2068 to 4080 leaf size)

14 gauge "Cased Open" continuously welded mortar filled frame

(Frame By HMF – Mortar filled on jobsite)

16 gauge flush door with 3/8" UC (with Proprietary Core) (By HMF)

#### Hardware:

(1) Hager 780-224HD Continuous Hinge (By Others)

(Or 4-1/2" or 5" Butt Hinges Approved\*) (By Others)

(1) 161 Lock (By Others)

(1) Zero 770SPB Strike Mounting Bracket (If Rim Panic) (By HMF)

(1) Set Zero 770A at Jambs and Head (By HMF)

(1) Zero 367 Auto Door Bottom (By HMF)

(1) Zero 564A Threshold (By HMF)

(1) Set Zero 119W (Omit at Hinge Jamb if Continuous Hinges are used) (By HMF)



## STC 46 Value Sound Seal Package

Zero 770 around perimeter of opening at head and jambs. Seal mounts on top of soffit. Install 564 threshold before the 770 sound seal.

Zero 119W around perimeter of opening at head and jambs. Install in door rabbet just off the stop but not butted up against the stop. This will typically be the last item installed. **Omit 119W at hinge jamb if continuous hinges are used.**


Zero 564 threshold positioned where door bottom seal makes an air tight seal at bottom of door. Threshold should be installed 1<sup>st</sup>.

Zero 367 automatic door bottom positioned at bottom of door and between 770 seal. Bottom seal should seal on top of 564 threshold.



# HMF EXPRESS

## STC 46 Value – Seals Installation Guide

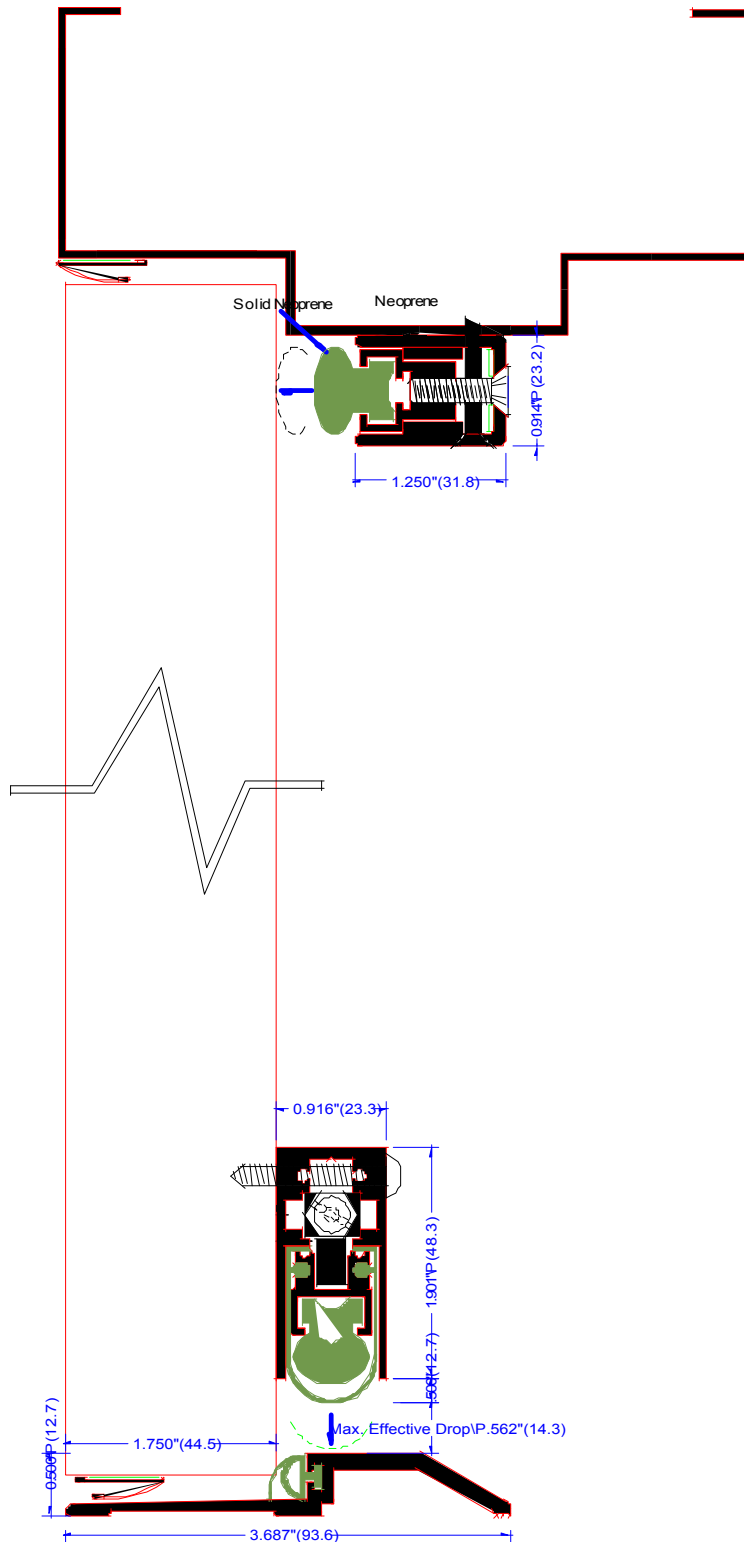

# FIRE RATING



UL listed



10B Classified up to 45 minutes



10C Classified




Category G Listed up to 20 minutes

# SMOKE PERFORMANCE



The rubber seal in this gasket provides protection from smoke infiltration in accordance with provisions of NFPA 101 Life Safety Code and NFPA 80 Standard for Fire Doors and Other Opening Protectives

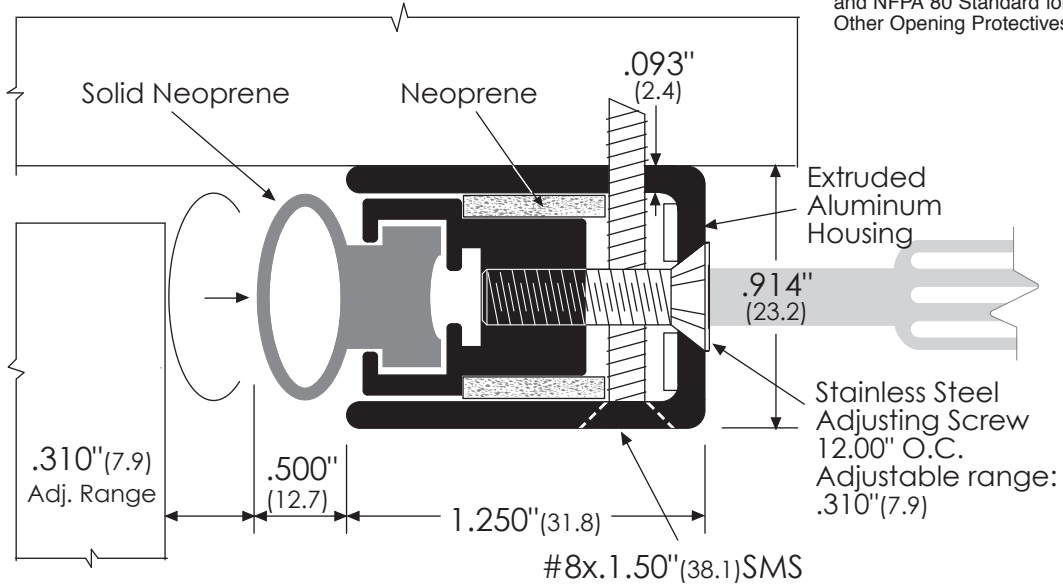

# ANSI/BHMA

## Legend:

AA = Clear Anodized  
D = Dark Bronze Anodized

Head & Jamb

#770AA / 770D

R3B264  
R3B204



415 Concord Avenue  
Bronx, NY 10455

email: zero@zerointernational.com  
web site: www.zerointernational.com

tel: 718.585.3230  
fax: 718.292.2243

## Part No:

770

## Notes:

## Part Description:

Adjustable Sealing System  
- STC Rated


Provided By:

Customer Name:



Job No:

Date:

# #770 Head and Jamb Protection INSTALLATION INSTRUCTIONS

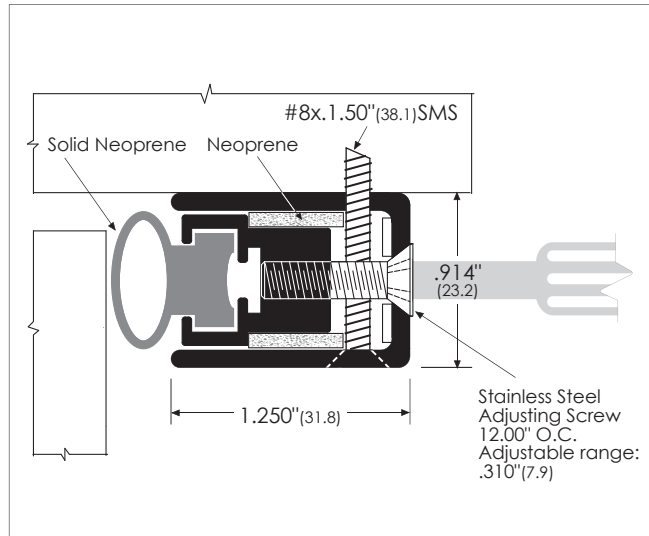

- 1 Close the door and measure the frame opening.
- 2 Install the gasketing (trim as necessary), head piece first. Place the piece against the face of door, making gentle contact between the rubber extrusion seal and the door. Fasten in place.
- 3 Place hinge side piece against the face of door, making gentle contact between the rubber extrusion seal and the door. Fasten in place. Repeat the same procedure with the lock side.
- 4 It is recommended that this gasketing product be set in a bead of caulking to ensure the integrity of the seal and prevent additional sound transmission.
- 5 Adjust the #770 with the adjustment screws as necessary for the desired seal and operation of the door.

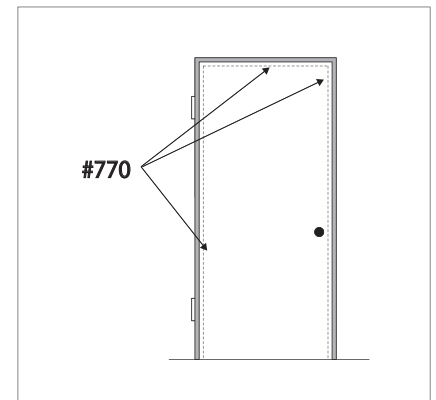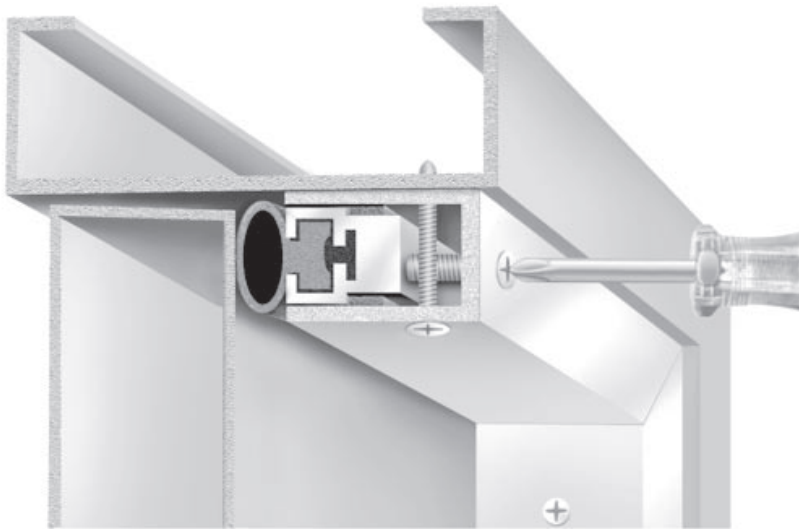

## ZERO INTERNATIONAL, INC.

415 Concord Avenue, Bronx, NY 10455-1004

Tel : 718-585-3230 • Fax : 718-292-2243

E-mail : zero@zerointernational.com


www.zerointernational.com


# FIRE RATING

 UL listed

 10C Classified

# SMOKE PERFORMANCE

 The rubber seal in this gasket provides protection from smoke infiltration in accordance with provisions of NFPA 101 Life Safety Code and NFPA 80 Standard for Fire Doors and Other Opening Protectives

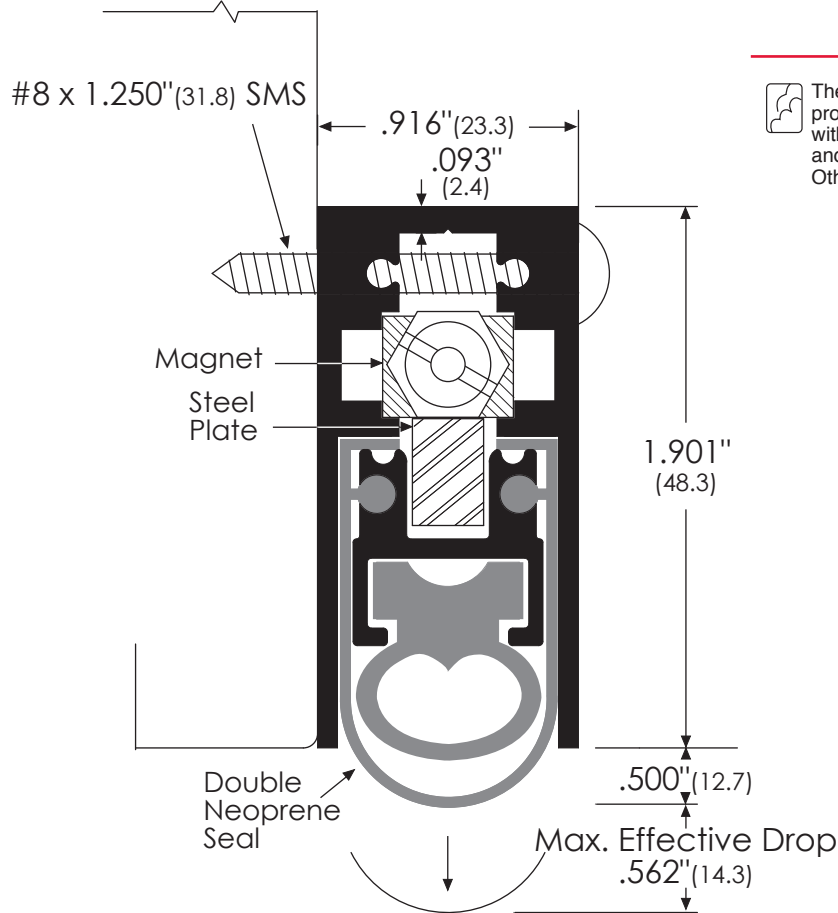

## Legend:

AA = Clear Anodized  
D = Dark Bronze Anodized  
G = Gold Anodized

## ANSI/BHMA

#367AA / 367D / 367G

R3B334



415 Concord Avenue tel: 718.585.3230  
Bronx, NY 10455 fax: 718.292.2243  
email: zero@zerointernational.com  
web site: www.zerointernational.com

## Part No:

367

## Notes:

## Part Description:

Automatic Door Bottom

- High Sound
- Surface Mounted / Heavy Duty

Provided By:

Customer Name:

Job No:

Date:




# INSTALLATION INSTRUCTIONS

## Automatic Door Bottoms #320, 350, 351, 352, 360, 361, 362, 364, 365, 366, 367, 368, 369








**ZERO INTERNATIONAL, INC.**  
415 Concord Avenue, Bronx, NY 10455-4801  
Tel: 718-585-3230 • Fax: 718-292-2243  
www.zerointernational.com









Typical Mounting of Automatic Door Bottoms

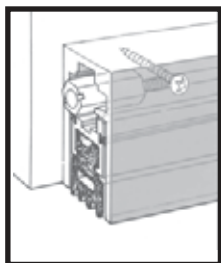








### ● Surface-Mounted

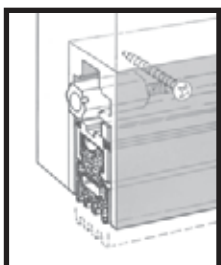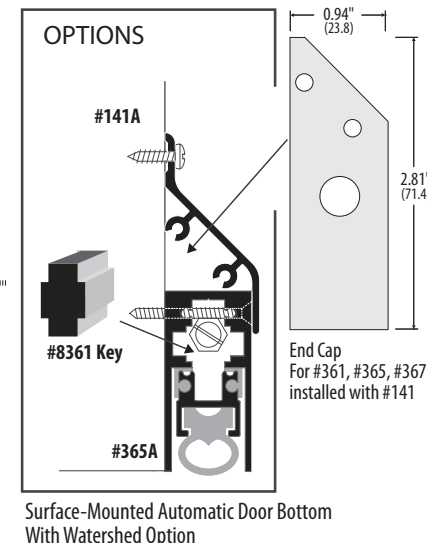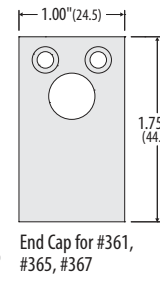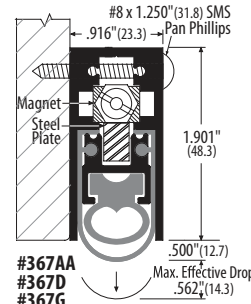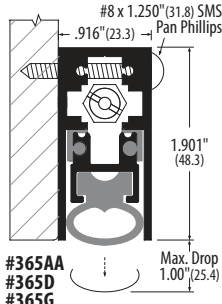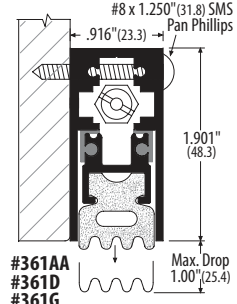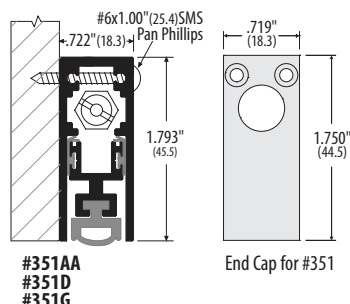

### ● Semi-Mortised

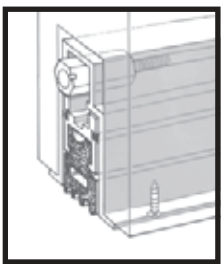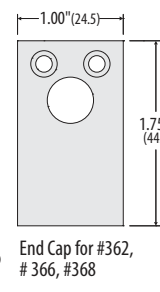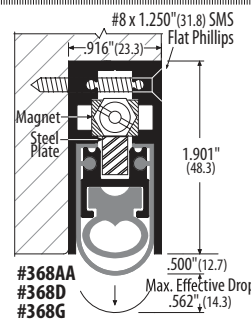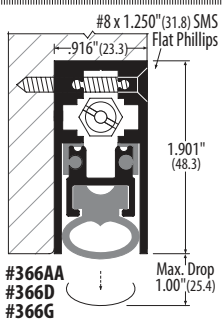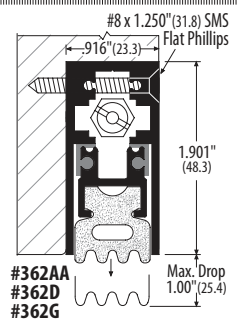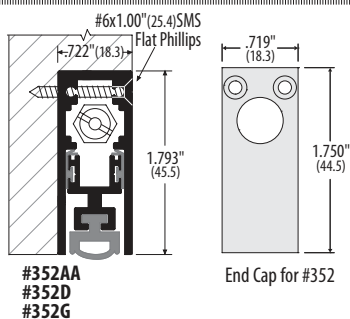


### ● Mortised

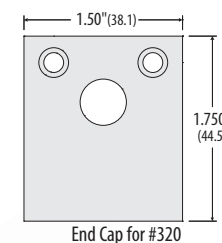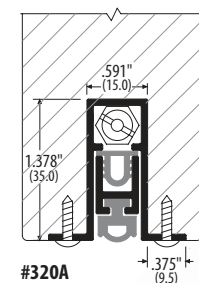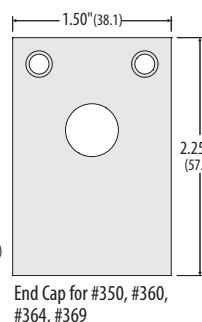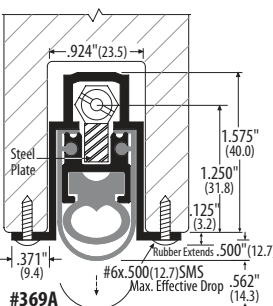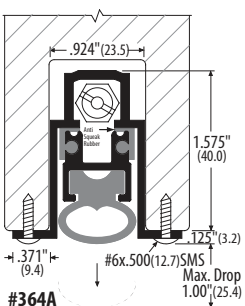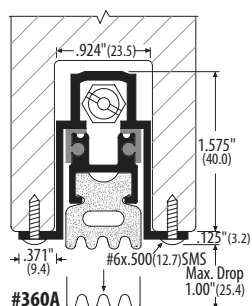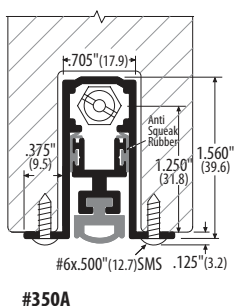

### How To Install:

- 1 All surface and semi-mortised units must be mounted on the push side of the door stop (side where the door stop is).
- 2 The brass adjusting nut must be on the hinge side and should not be adjusted until the unit has been mounted.
- 3 Leave 1/16" (1.6) clearance on each end.
- 4 Optimum clearance between door bottom unit and floor or sill is 3/8" (9.5).

### TRIMMING INSTRUCTIONS

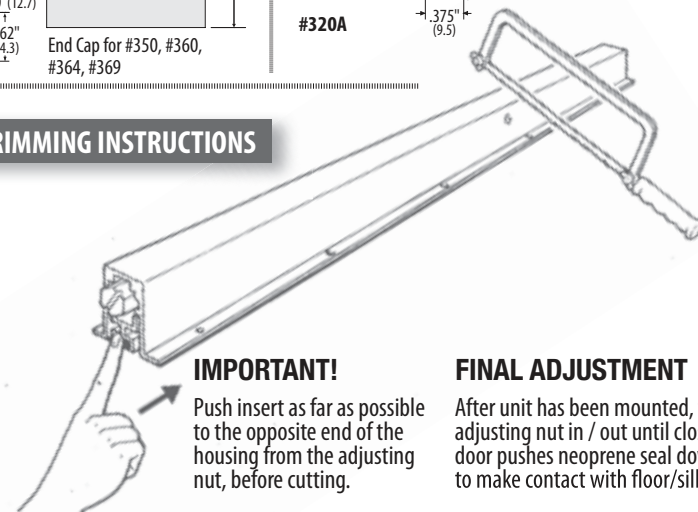

### IMPORTANT!

Push insert as far as possible to the opposite end of the housing from the adjusting nut, before cutting.

### FINAL ADJUSTMENT

After unit has been mounted, turn adjusting nut in / out until closing door pushes neoprene seal down to make contact with floor/sill.

## FIRE RATING



ITS Warnock Hersey listed




10C Classified

## SMOKE PERFORMANCE



The rubber seal in this gasket provides protection from smoke infiltration in accordance with provisions of NFPA 101 Life Safety Code and NFPA 80 Standard for Fire Doors and Other Opening Protectives

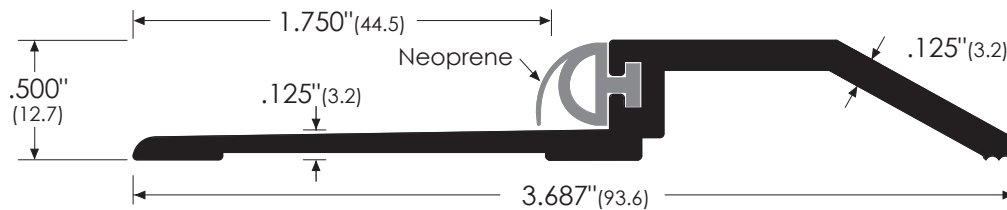

### Legend:

A = Aluminum  
B = Bronze  
D = Dark Bronze Anodized  
E = Epoxy

### ANSI/BHMA

#564A / 564D	J36300
#564AE / 564DE	J36400
#564B	J16300
#564BE	J16400



415 Concord Avenue tel: 718.585.3230  
Bronx, NY 10455 fax: 718.292.2243  
email: zero@zerointernational.com  
web site: www.zerointernational.com

### Part No:

564

### Notes:

### Part Description:

Rabbeted Threshold

Provided By:

Customer Name:

Job No:

Date:

## Thresholds

### INSTALLATION INSTRUCTIONS

- 1 Measure and cut threshold to size as required.
- 2 Notch as necessary, to suit door frame.
- 3 Caulk underneath and around edges of threshold for moisture control.
- 4 Attach threshold to floor surface with screws provided.




#### **ZERO INTERNATIONAL, INC.**

415 Concord Avenue, Bronx, NY 10455-1004

Tel : 718-585-3230 • Fax : 718-292-2243

E-mail : [zero@zerointernational.com](mailto:zero@zerointernational.com)

[www.zerointernational.com](http://www.zerointernational.com)

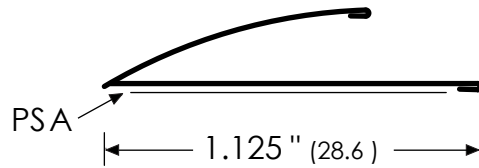

**#119WB**  
**#119WS**

34 B. & S. Gauge Spring Bronze

**Legend:**

B = Bronze  
S = Stainless Steel

ANSI/BHMA

#119WB  
#119WS

R1K155  
R5K155



415 Concord Avenue tel: 718.585.3230  
Bronx, NY 10455 fax: 718.292.2243  
email: zero@zerointernational.com  
web site: www.zerointernational.com

**Part No:**  
**119W**

**Notes:**

**Part Description:**  
  
Door Seal  
  
- Adhesive



**Provided By:**

**Customer Name:**

**Job No:**

**Date:**

# #119B / 119WB / 119WS Bronze Cushion Spring INSTALLATION INSTRUCTIONS

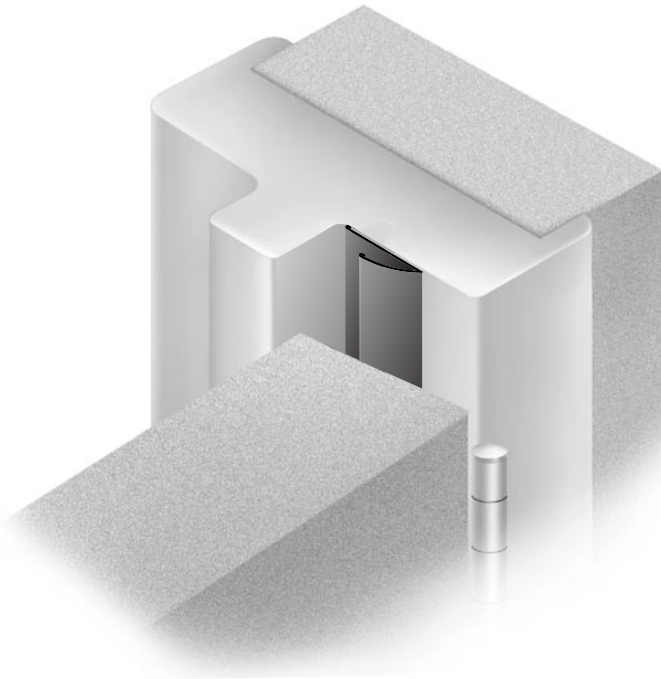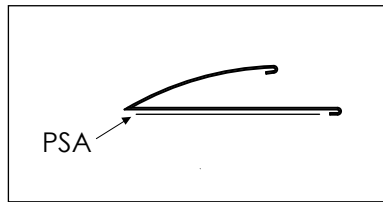


## Before Installation :

- 1 Thoroughly clean the surface of the frame where gasketing is to be applied (see drawings). Use either a solvent cleaner (such as mineral spirit) or a common detergent cleaner. Make sure to check for any impediments (dust, dirt, oil, grease, loose paint, etc.) and remove them from the surface area.
- 2 Allow surface area to dry COMPLETELY before beginning installation.
- 3 Recommendation: Finish-paint doors and frames and allow the paint to dry before installing the gasketing.

## How To Install :

- 1 Install the head piece first along the entire length of the head. Measure and cut the gasketing to size and place properly, referring to drawings for location on the head. Remove the paper backing from the self-adhesive strip (PSA), align on the head and press firmly into place.
- 2 Install the strike jamb gasketing next, following procedures as outlined in step 1. (Refer to drawing for placement on the strike jamb.)
- 3 Install the hinge jamb gasketing last, following procedures as outlined in step 1. (Refer to drawing for placement on the hinge jamb.)

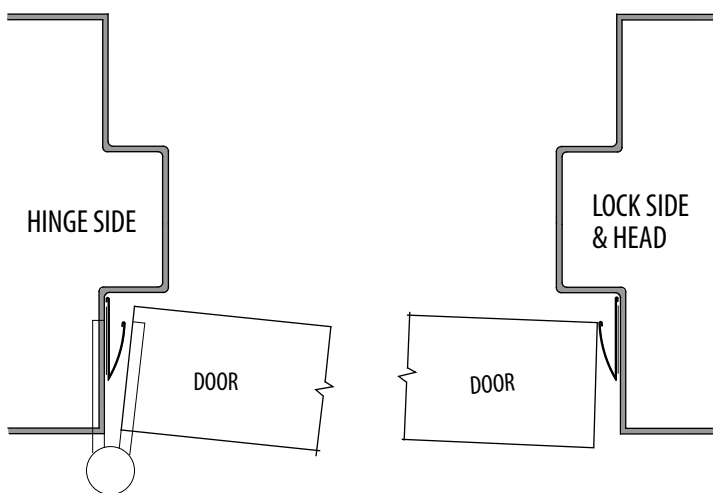

## ZERO INTERNATIONAL, INC.

415 Concord Avenue, Bronx, NY 10455-1004  
Tel : 718-585-3230 • Fax : 718-292-2243  
E-mail : zero@zerointernational.com  
www.zerointernational.com