

CURRIES LOCATIONS.xls
2 HINGES

Hinge Size	Hinge Qty.	Opening Height	1st Hinge	2nd Hinge	3rd Hinge	4th Hinge	Strike Location AFF
4.50	2	2'	5	14 1/2	X	X	12
4.50	2	2'2"	5	16 1/2	X	X	13
4.50	2	2'4"	5	18 1/2	X	X	14
4.50	2	2'6"	5	20 1/2	X	X	15
4.50	2	2'8"	5	22 1/2	X	X	16
4.50	2	2'10"	5	24 1/2	X	X	17
4.50	2	3'	5	21 1/2	X	X	18
4.50	2	3'2"	5	23 1/2	X	X	19
4.50	2	3'4"	5	25 1/2	X	X	20
4.50	2	3'6"	5	27 1/2	X	X	21
4.50	2	3'8"	5	29 1/2	X	X	22
4.50	2	3'10"	5	31 1/2	X	X	23
4.50	2	4'	5	33 1/2	X	X	24
4.50	2	4'2"	5	35 1/2	X	X	25
4.50	2	4'4"	5	37 1/2	X	X	26
4.50	2	4'6"	5	39 1/2	X	X	27
4.50	2	4'8"	5	41 1/2	X	X	28
4.50	2	4'10"	5	43 1/2	X	X	29
4.50	2	5'	5	45 1/2	X	X	30
5	2	2'	4 3/4	14 1/4	X	X	12
5	2	2'2"	4 3/4	16 1/4	X	X	13
5	2	2'4"	4 3/4	18 1/4	X	X	14
5	2	2'6"	4 3/4	20 1/4	X	X	15
5	2	2'8"	4 3/4	22 1/4	X	X	16
5	2	2'10"	4 3/4	24 1/4	X	X	17
5	2	3'	4 3/4	26 1/4	X	X	18
5	2	3'2"	4 3/4	28 1/4	X	X	19
5	2	3'4"	4 3/4	30 1/4	X	X	20
5	2	3'6"	4 3/4	32 1/4	X	X	21
5	2	3'8"	4 3/4	34 1/4	X	X	22
5	2	3'10"	4 3/4	36 1/4	X	X	23
5	2	4'	4 3/4	38 1/4	X	X	24
5	2	4'2"	4 3/4	40 1/4	X	X	25
5	2	4'4"	4 3/4	42 1/4	X	X	26
5	2	4'6"	4 3/4	44 1/4	X	X	27
5	2	4'8"	4 3/4	46 1/4	X	X	28

Note: (1) Locations and adjustments must be verified with each manufacturer.

CURRIES LOCATIONS.xls

2 HINGES

Hinge Size	Hinge Qty.	Opening Height	1st Hinge	2nd Hinge	3rd Hinge	4th Hinge	Strike Location AFF
5	2	4'10"	4 3/4	48 1/4	X	X	29
5	2	5'	4 3/4	50 1/4	X	X	30

Subtract clearance from hinge locations & undercut from strike locations for doors

Note: (1) Locations and adjustments must be verified with each manufacturer.

(2) HMF Express is not responsible for errors resulting from using this table.