




U.L. K.D. FRAME ASSEMBLY

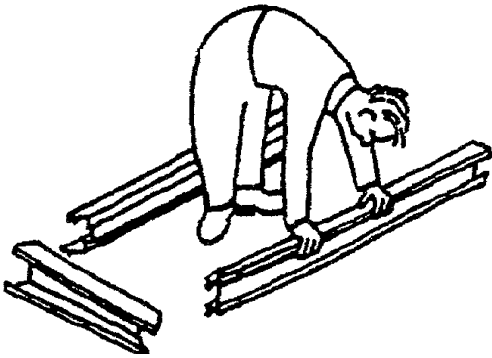


1. LAY OUT HEAD AND JAMBS

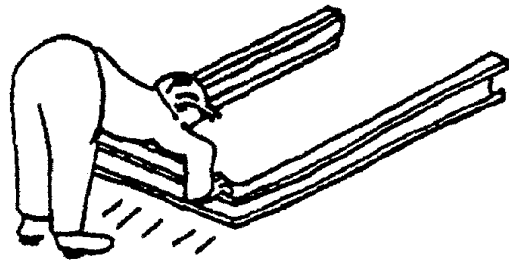


2. SLIDE JAMB TABS INTO HEAD SLOTS

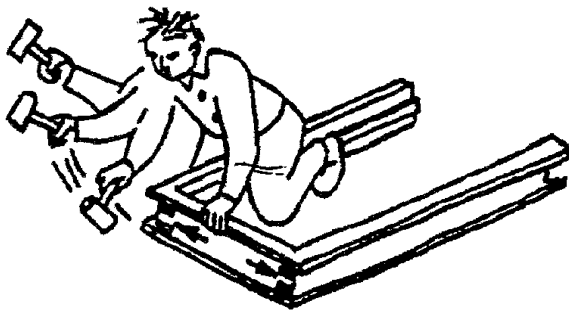

3. SQUARE FRAME AND BEND TABS INSIDE THE THROAT FIRST BEING CAREFUL NOT TO MAKE DOOR OPENING TOO TIGHT.

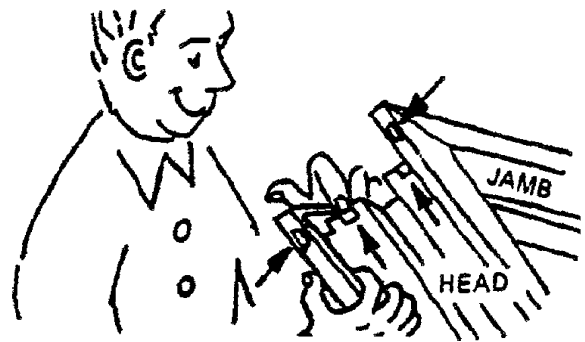

4. BEND EACH TAB IN THE DIRECTION OF ARROWS; BEND ALL TABS FLAT AGAINST HEAD.

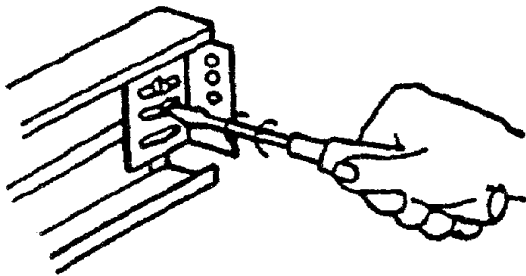

5. APPLIES TO OPTIONAL ADJUSTABLE BASE ANCHORS. ATTACH ADJUSTABLE BASE ANCHORS WITH SHEET METAL SCREWS. IF FRAME IS NOT TO BE SET DIRECTLY ON SLAB, ADJUST BASE ANCHORS UPWARD AS REQUIRED.

*** FIXED FLOOR ANCHORS ARE STANDARD, NO ADJUSTMENT IS NECESSARY.

6. AN ANCHOR MUST BE USED FOR EACH 30" OF JAMB HEIGHT OR FRACTION THEREOF. ON THE HINGE JAMB, EACH ANCHOR MUST BE LOCATED IMMEDIATELY ABOVE OR BELOW EACH HINGE REINFORCEMENT. ON THE STRIKE JAMB, THE ANCHORS MUST BE LOCATED DIRECTLY OPPOSITE ANCHORS ON THE JAMB.